



EUROPROVYL
duurzame kozijnoplossingen

VERSION **JANUARY 2026**

Lifting Instructions

Requirements and Guidelines
for Safe Lifting



**So that everyone returns
home safely every day.**



ENGLISH

The Lifting Instruction:

Inspection


- ① Check that the window frames / glass panes are evenly distributed on the support.
- ② Check that the window frames / glass panes are securely fastened to the support.
- ③ Check that the lifting slings show no cracks, knots, or signs of wear.

Attaching the Lifting Slings

- ④ Attach the four-leg sling to the crane and ensure that the loop is fully seated in the load hook.
- ⑤ Guide the lifting slings through the pockets / openings of the support using a suitable tool.
- ⑥ Attach the lifting slings to the four-leg sling, ensuring that the loops are fully seated in the load hooks and that the slings are not twisted.

Lifting Process

- ⑦ Slowly lift the first 5 cm. Check that the support is horizontal. If not, adjust the frames or glass panes.
- ⑧ Carefully lift the support to the desired location on the upper scaffold (use a guide line if necessary).
- ⑨ Disconnect the lifting slings from the four-leg sling.
- ⑩ Remove the frames / glass panes from the support.
- ⑪ Reattach the lifting slings to the four-leg sling and lift the empty support back to the ground in the same manner.
- ⑫ Once the object is safely in place, remove the lifting slings and the four-leg sling.

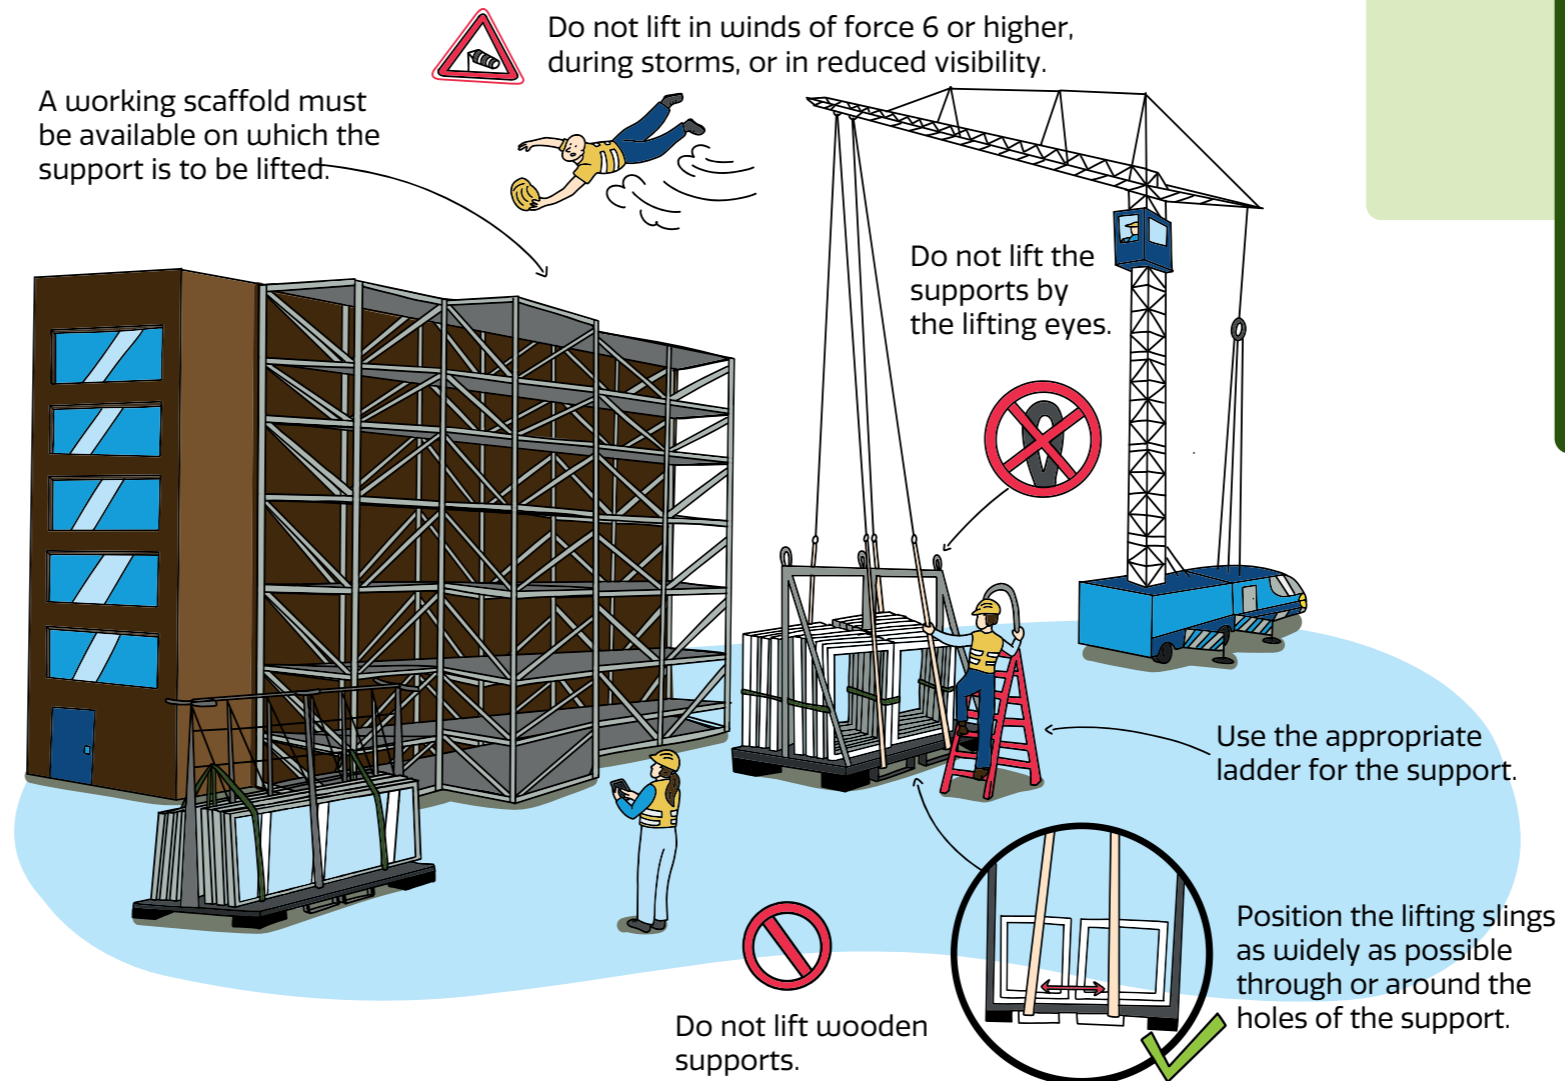


Wichtige Hinweise

- Watch out for any sharp edges at the bottom of the support that could damage the lifting slings. Apply protective measures if necessary.
- Remove the lifting slings carefully from the object. Make sure not to damage the materials.
- The label on the lifting sling must be readable. Ensure that the slings have no knots or twists, as these can affect the load distribution.
- ATTENTION! For heights above four floors: connect the lifting slings above the support using a tension strap and, if necessary, also to the transport (lifting) eyes. This prevents the support from tipping in case the wind affects the load to be lifted.

Grundlagen

- Safety has the highest priority when lifting, hoisting, and moving supports (!).
- The area where the lifting work takes place must be secured with barriers.
- The support must stand stably on the ground.
- Lifting slings and the four-leg sling must be inspected and approved. Additionally, the lifting slings must be capable of bearing the load. For stability, two lifting slings should be used.
- A working scaffold must be available on which the support is lifted.

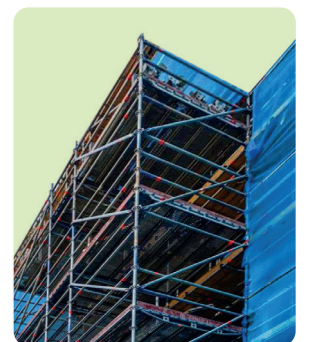



Bezoekadres
Vestaweg 1
8938 AV Leeuwarden

058 205 99 99
info@europrovyl.nl
www.europrovyl.nl

IBAN NL58 INGB 0650 1087 87
KvK 01040596
BTW NL003514067.B01